

# TIVO REMOTE CONTROL

**TiVo icon:** Displays the TiVo Central screen

**TV Pwr:** Turns TV on/off

**Input:** Changes the TV input source

**Back:** Displays the previous screen

Arrow buttons (on **OK** wheel): Used to navigate the on-screen menus and guides

**Vol:** Turns the volume up/down

**Mute:** Turns audio on/off

**Rewind (<<):** Rewinds the current program. Press repeatedly for three different speeds

**Pause (||):** Pauses the current program

**Replay** (twist arrow): Repeats the previous 8 seconds of program. Press and hold to jump to start of program

**On Demand:** Displays the VOD Options screen. (This button is not functioning at this time see page 6 for On Demand Access)

**Thumbs Up** or **Thumbs Down** icons: Rates programs, collections, and video providers for TiVo Suggestions

**NETFLIX:** Displays the NETFLIX screen

**A, B, C, and D** buttons: Used to sort and filter views

**Clear:** Removes the Guide or Info banner from view and deletes titles from My Shows or To Do list

**Live TV:** Displays Live TV

**i:** Displays or hides Info banner

**OK/Select:** Makes a selection, confirms choice in Live TV, or displays the Mini Guide

**Exit:** Closes the current screen

**Ch:** Changes channel and moves up/down through the Guide

**Voice Commads:** Press and hold to issue voice commands

**Guide:** Displays the list of programs. Press again to display filtered views

**Red dot:** Records current program or schedules recording of a program selected in the Guide

**Play (>):** Plays a recorded program

**Fast Forward (>>):** Fast-forwards current program. Press repeatedly for three different speeds

**Advance (>|):** Moves current program forward in 30-second jumps. Press and hold to go to end of program

**Number buttons (0-9):** Choose channel

**Enter/Last:** Displays previous Live TV channel

