

Changing the Input On Your TV

If your TV screen shows a black screen or says, “no input,” don’t panic. It’s possible that you accidentally pressed a button on your remote, resulting in your TV being on the wrong input source. Let’s explore a simple but often overlooked solution.

STEP 1

Check your remote control for an ‘input’ or ‘source’ button. On the Blue Stream Fiber remote, it is located near the power button.




STEP 2

Press the ‘input’ or ‘source’ button on your remote control. This button allows you to switch between different input sources.



STEP 3

Keep pressing the button until you see the desired input displayed on your TV screen.

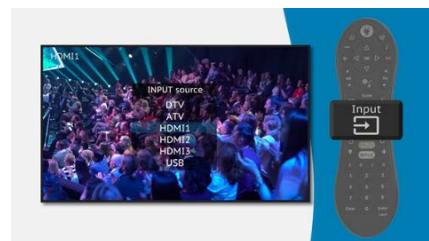

STEP 4

Once you’ve selected the correct input source, your TV should start working again.



STEP 5

Remember, if you encounter a blank screen, simply press the ‘input’ or ‘source’ button and ensure you’re on the right input source.